

## Interior temperature transmitter with RS232 output



code: T0318

Ambient temperature transmitter. Indoor use.

For exacting interiors in building energy management and HVAC systems. Are designed for easy installation on ordinary KU68 wiring boxes for household switches and sockets.

## **Technical data**

-10 to +50 °C
±0.5 °C
0.1 °C
-10 to +50 °C
internal temperature sensor
RS232
degrees Celsius, degrees Fahrenheit
ModBus RTU and Advantech ADAM compatible protocol
9 to 30 Vdc
IP20
88 x 106 x 33 mm
approx. 150 g
3 years