ALGIZ 10XR

QUICK START GUIDE



handheld


WHAT'S IN THE BOX

| Ref. | Item | Description |
|------|--------------|-------------------------------------|
| 1 | Algiz 10XR | Ultra-rugged 10-inch Windows tablet |
| 2 | Battery Pack | One 3 Cell Li-Ion Battery Pack |
| 3 | 19V Adapter | 19V Adapter w/ standard power cord |


STARTING ALGIZ 10XR

NOTE: Microsoft Windows license number that is located under the main battery. Press and hold power button for few seconds to power on the unit when power adapter is connected. Follow the on-screen instructions to get started with Windows.

INSERT BATTERY PACK

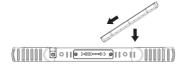

INSERT SIM CARD & SD CARD

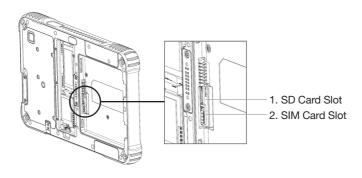

FUNCTION KEYS




| Ref. | Components | Description |
|------|-----------------|--|
| 1 | Power button* | Hold down for a short period to turn the computer on |
| 2 | Touch mode/lock | Touch mode selection. Lock screen. |
| 3 | Menu | Controls brightness, volume, battery, power to modules and system information. |
| 4 | Windows key | Open start menu. |
| 5 | Function keys | Two programmable buttons. Press menu to configure. |

^{*} If computer does not respond you can power off by holding down the Power Button until the LEDs switches off. Hold down for about 4 seconds.

LED INDICATORS


| Ref. | Symbol | Indicator Status Description |
|----------------|--------|--|
| Power mode | • 0 0 | Green: System is on No light: System is off or LED indicators are off in HotTab |
| Storage Status | 0 0 0 | Flashing blue light: SSD is reading/writing data |
| Battery Status | 0 0 • | Green: Full battery Red: Low battery or running on Hot-swap battery Orange: Charging |

REAR VIEW

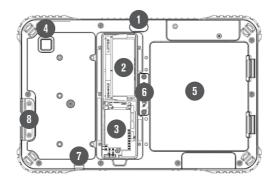

| Ref. | Item | Description |
|------|---------------------------|---------------------------------------|
| 1 | Rear Camera | Rear camera with LED flash |
| 2 | Service Window | Expansion slots: Memory module |
| 3 | Service Window | Expansion slots: 5G module |
| 4 | Fingerprint Reader | Fingerprint reader |
| 5 | External Battery | Exchangeable external battery |
| 6 | Rear Pogo Connector | Rear pogo connector for expansion |
| 7 | DC Jack Cover | Cover for protect DC jack |
| 8 | Side USB Connectors Cover | Cover for protect side USB connectors |

LEFT AND BOTTOM VIEW

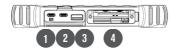



| Ref. | Item | Description |
|------|-----------------------|--|
| 1 | USB 3.0 Port | Type C (Power Delivery and DisplayPort Alternate Mode) |
| 2 | USB 3.0 Port | Type C |
| 3 | USB 3.0 Port | Type A |
| 4 | Side Expansion Slot | Slot for expansion modules |
| 5 | Bottom Pogo Connector | Bottom pogo connector for docking |
| 6 | DC Power Jack | 19V DC/65W, 100 ~ 240V, 50 ~ 60Hz |

Please go to www.handheldgroup.com/knowledgebase to download more information.

